

Multi-Deck Maintenance

To ensure you get the most out of your new Falcan Multi-deck there are a few key maintenance items we recommend!

We recommend removing the caps from the end of your arms, lifting them up so they are straight up and down or on a slight angle and blowing them out with an air hose! If you feed a lot say 2-4 bales or more everyday in the winter removing the caps will also help keep them from filling up!

We also recommend removing the plate off your rear tube and inspecting it, if you see it building up with feed etc, just take the other cap off and blow out with an air hose or pressure washer.

It is strongly recommended that you grease your deck at least once a month. If you use your deck a lot more frequent greasing may be required. You will find grease zerks in the following locations:

2 on each arm, 1 on each side of rear tube, and 2 at the very back of the deck where your rear tube attaches to the deck! (shown in images 1-3)

Your hydraulic filter should be replaced at least once a year.

We advise keeping the hitch ball in the cab to prevent it from seizing, but ball should also be greased once or so a year or while towing to reduce wear on ball and trailer hitch.

Your hoses should be visually inspected once a month(nobody likes blowing a hose while feeding!)

Over time you may notice your toolbox latches seem a bit loose causing them to rattle or potentially allow water to enter, to adjust them there is two nuts on the inside of the handle on the latch adjusting these will tighten up the seal on your doors.

If you notice that your arms are not extending at the same rate run them all the way out until both arms are fully extended then hold for 3-5 seconds, bring them back in holding for 3-5 seconds, repeat this process a couple times until arms are extending in sync.

-Your squeeze arms may go out of center over time(one arm is more inward than the other) to resync the arms:

-Loosen the 4 bolts on the bottom of the rear tube (shown in image 4)

-With arms all the way down on the deck hold squeeze out up against the side rails while you the 4 bolts back up.

When check your oil level it should be about 1 inch down from the top of the tank we recommend Light 22 non synthetic. **We do not recommend using ATF or synthetic oils.**

Our Falcan team is always happy to help with any questions or concerns you may have!



